


(RIGHT HAND)

Scale 1:1

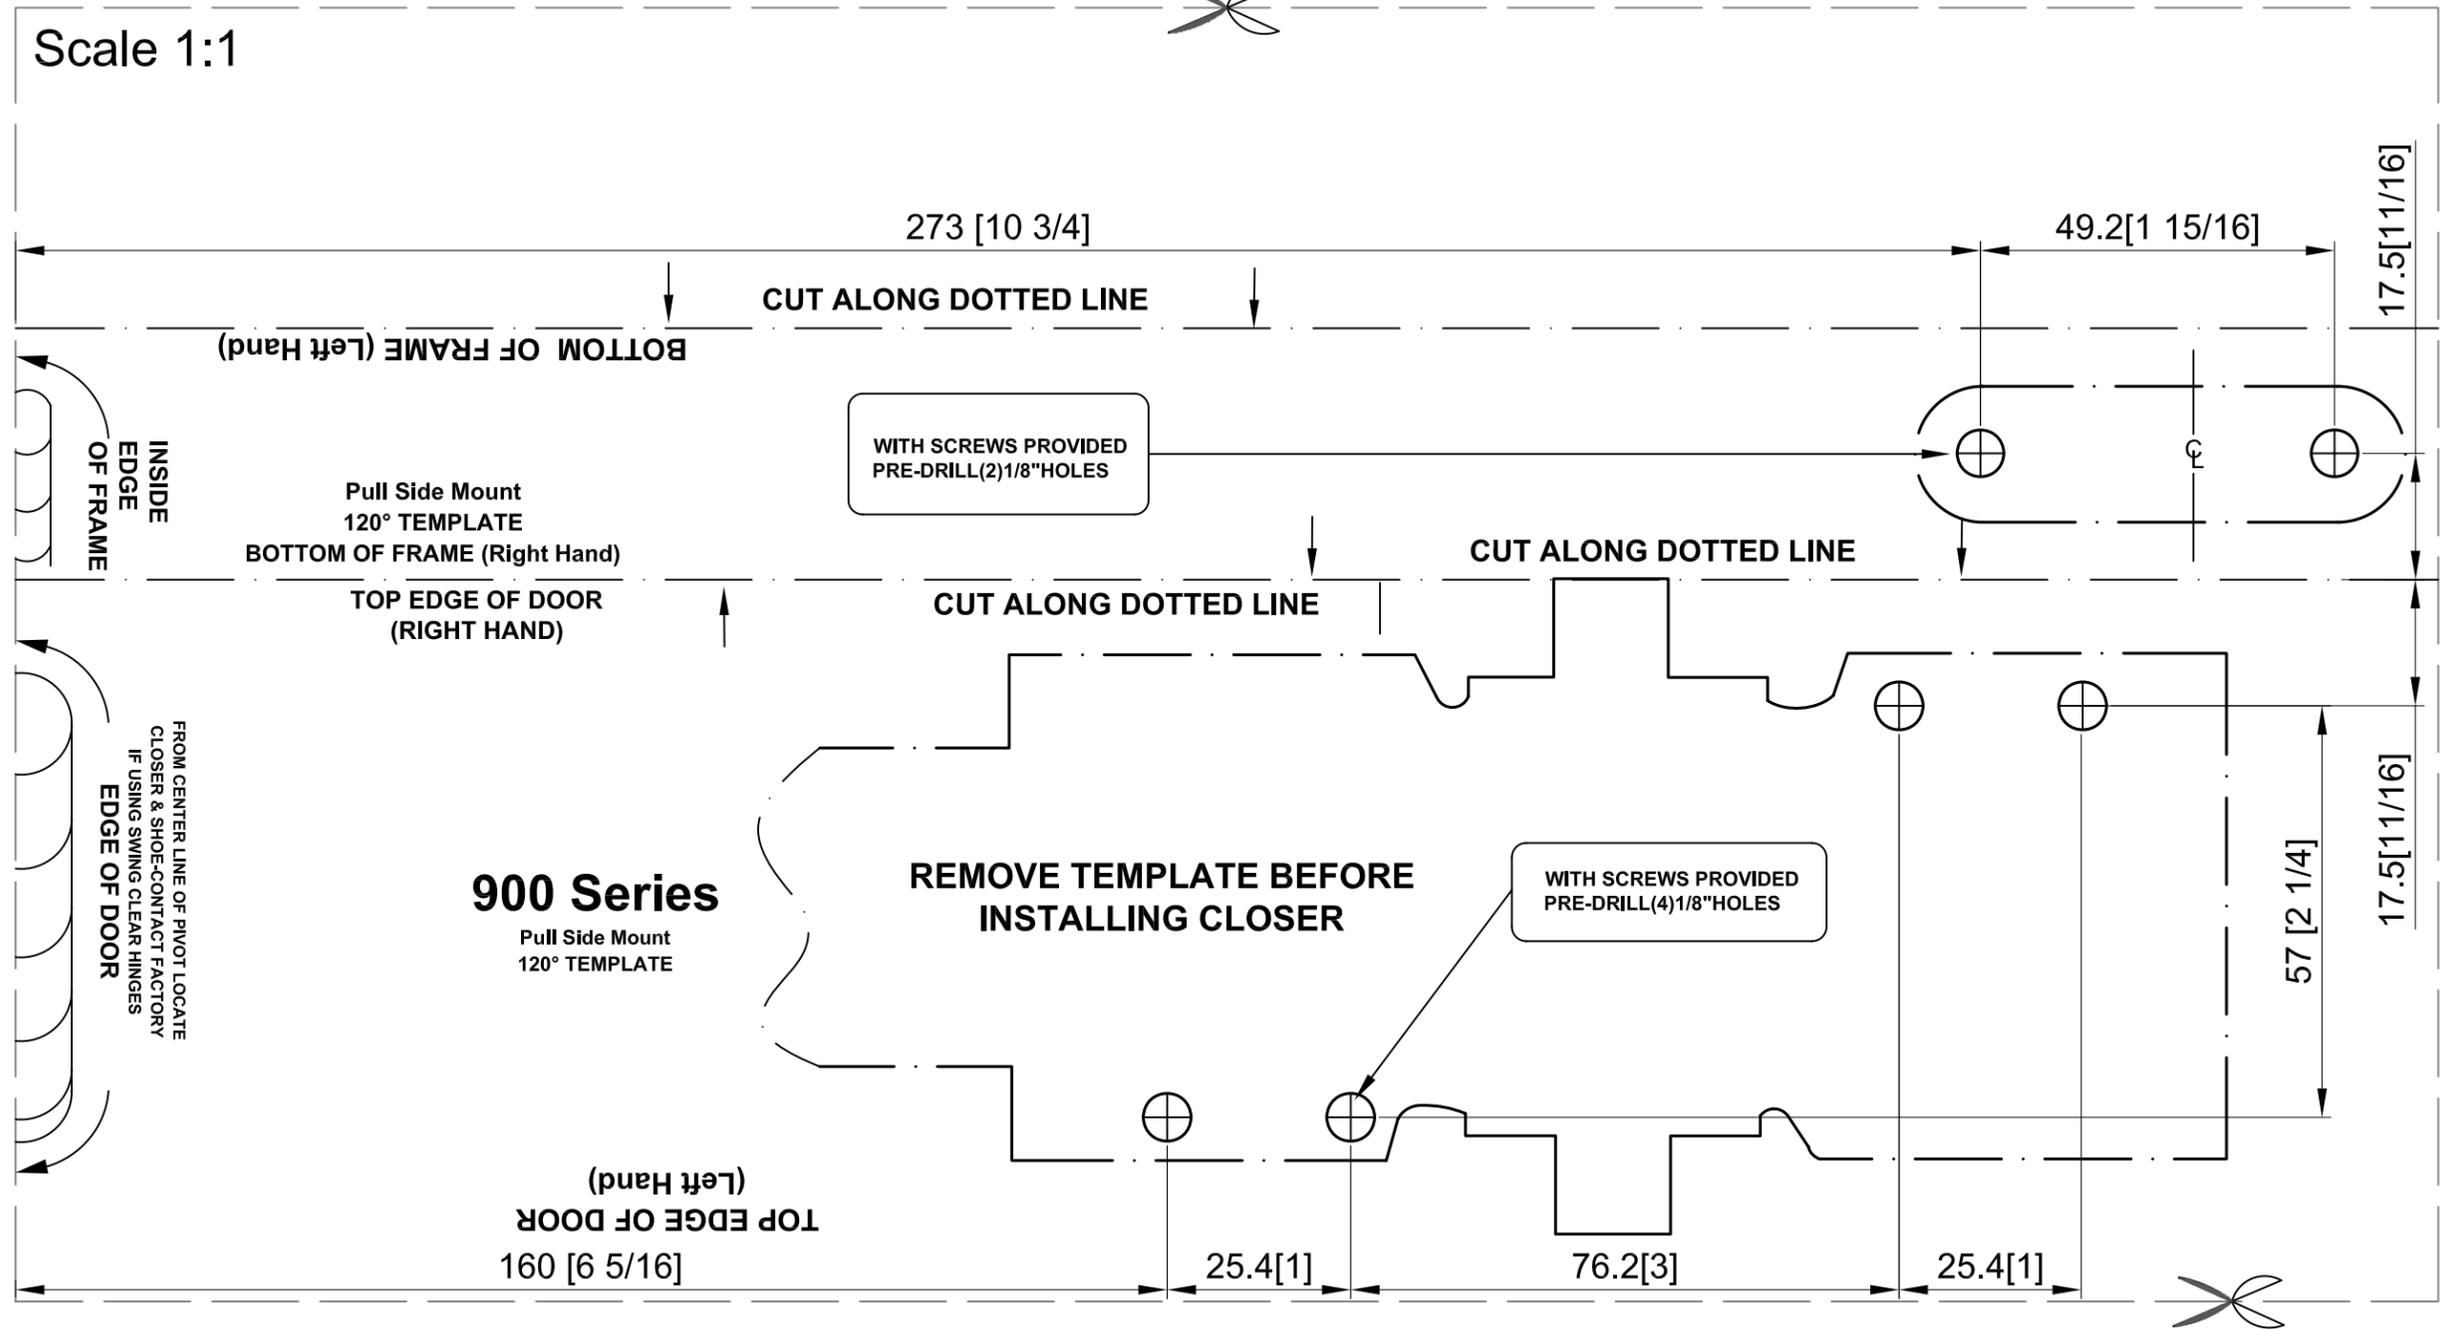




(RIGHT HAND)

# 900 Series


PARALLEL ARM  
APPLICATION MOUNT  
180° TEMPLATE

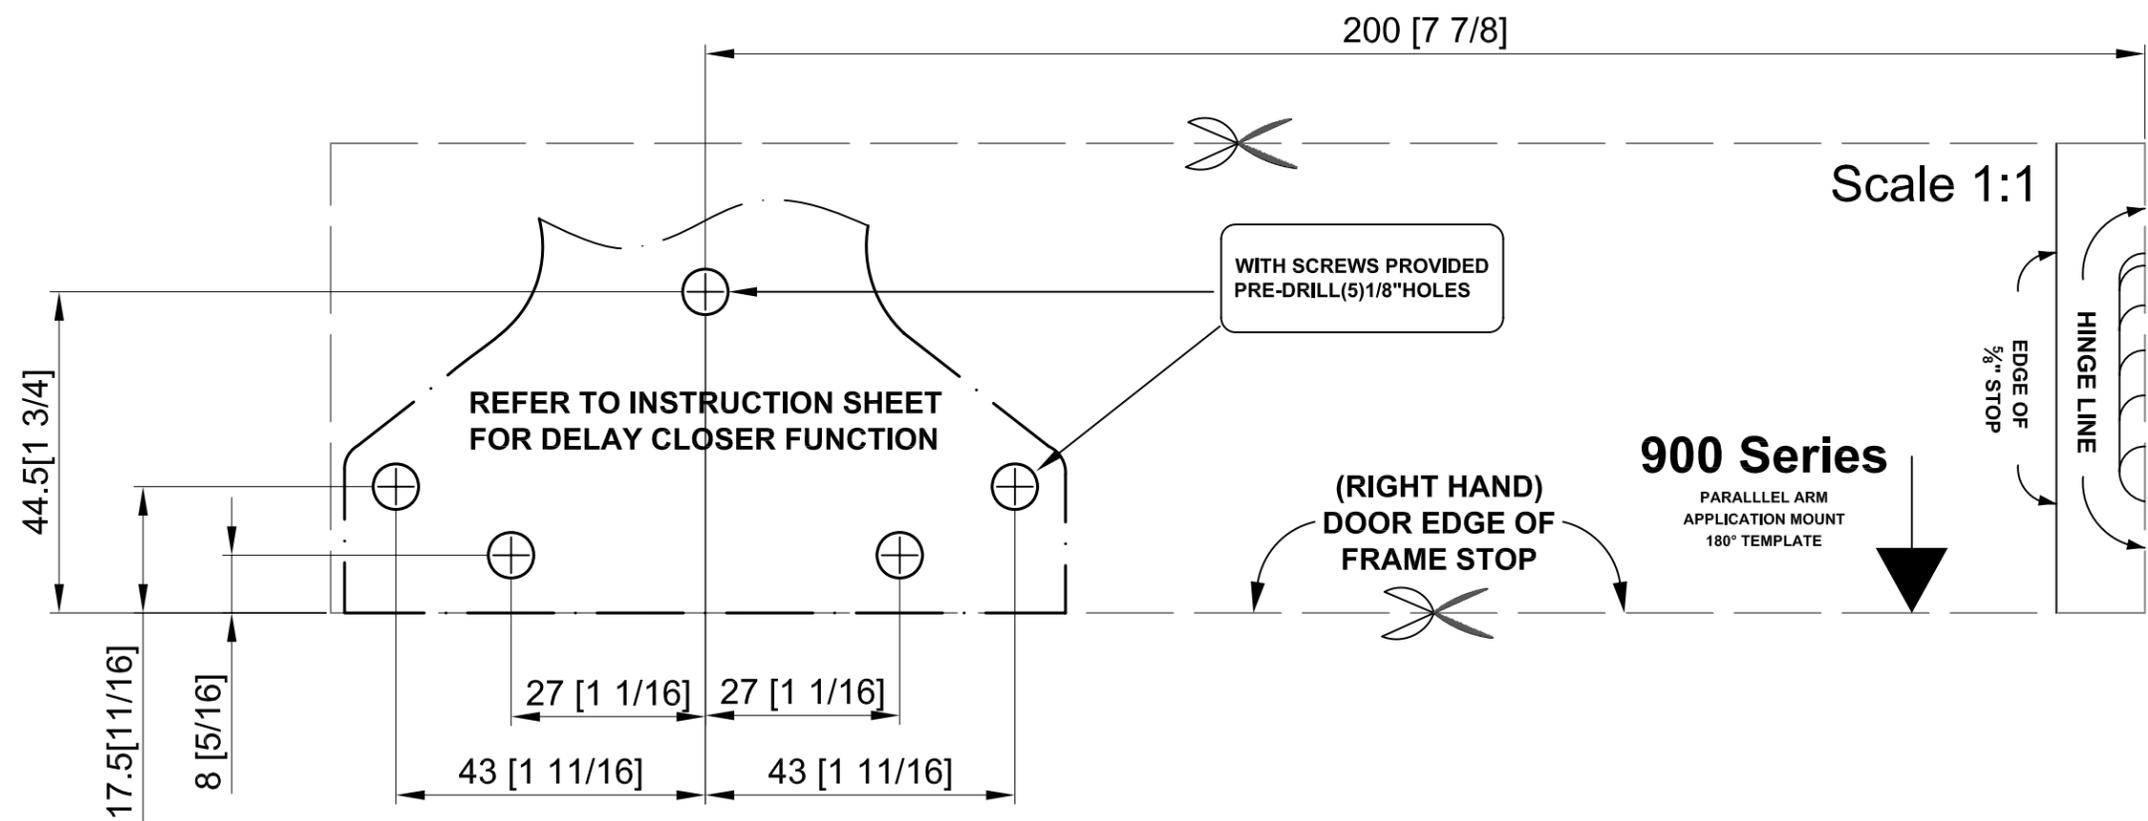

(RIGHT HAND)

# 900 Series


PARALLEL ARM  
APPLICATION MOUNT  
180° TEMPLATE

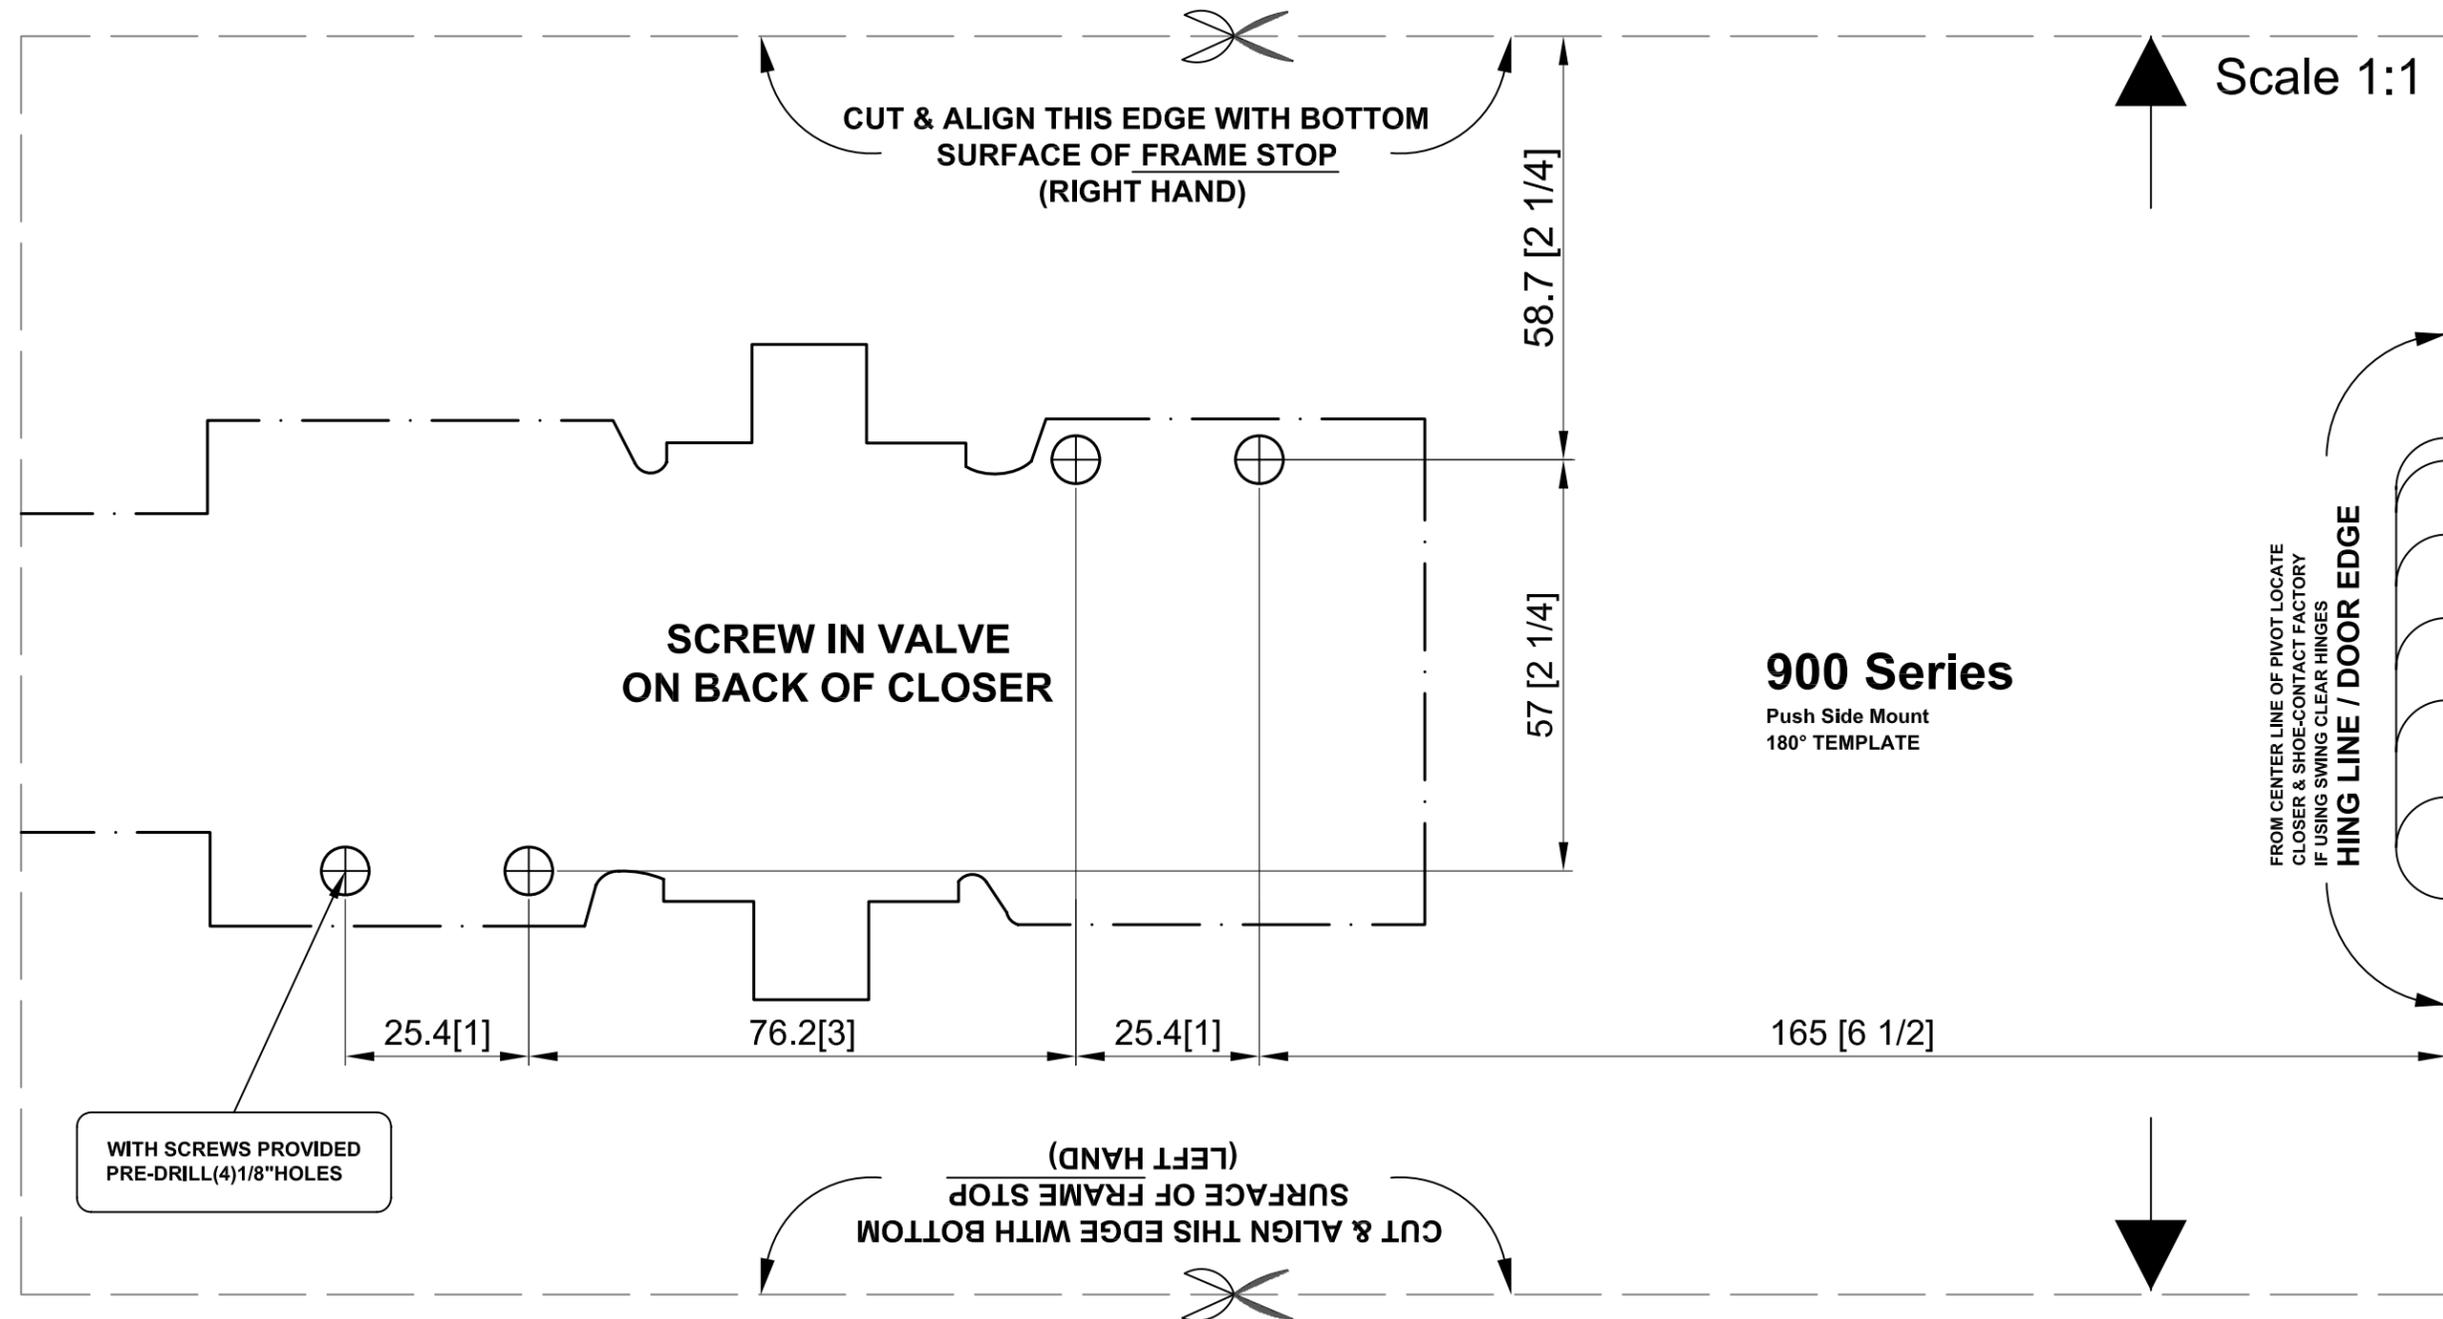

(LEFT HAND)

# 900 Series

PARALLEL ARM  
APPLICATION MOUNT  
180° TEMPLATE

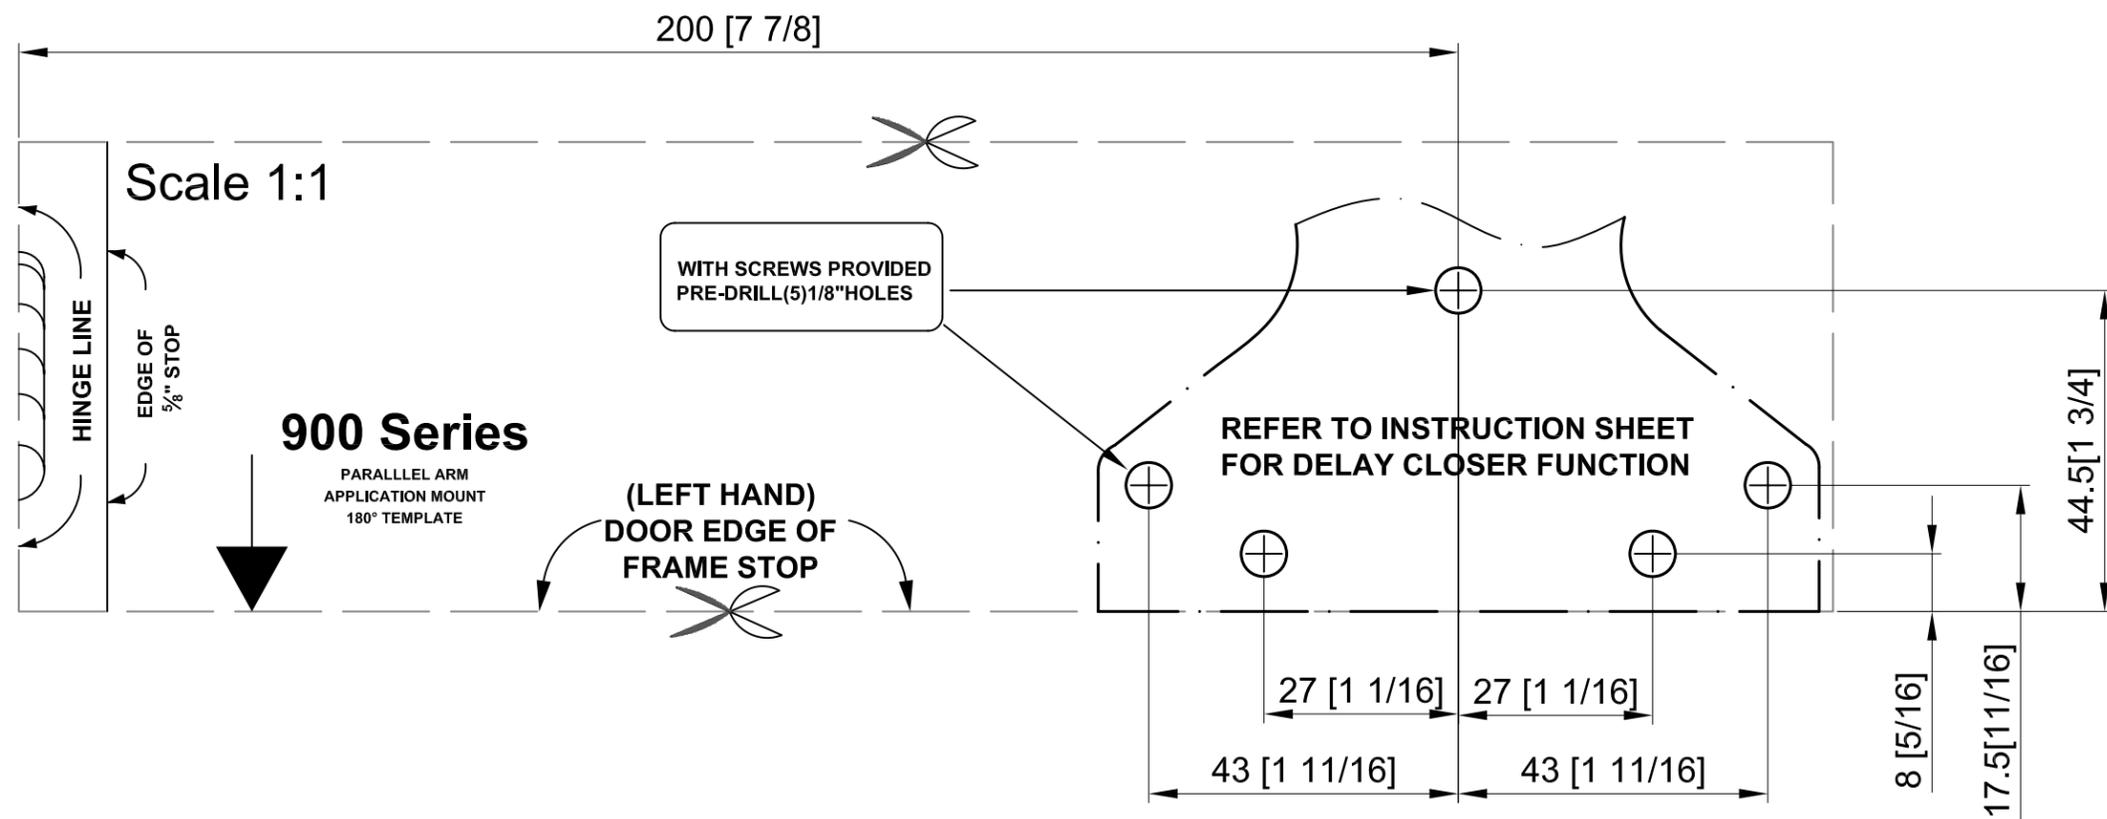


(LEFT HAND)

# 900 Series

PARALLEL ARM  
APPLICATION MOUNT  
180° TEMPLATE

Scale 1:1 

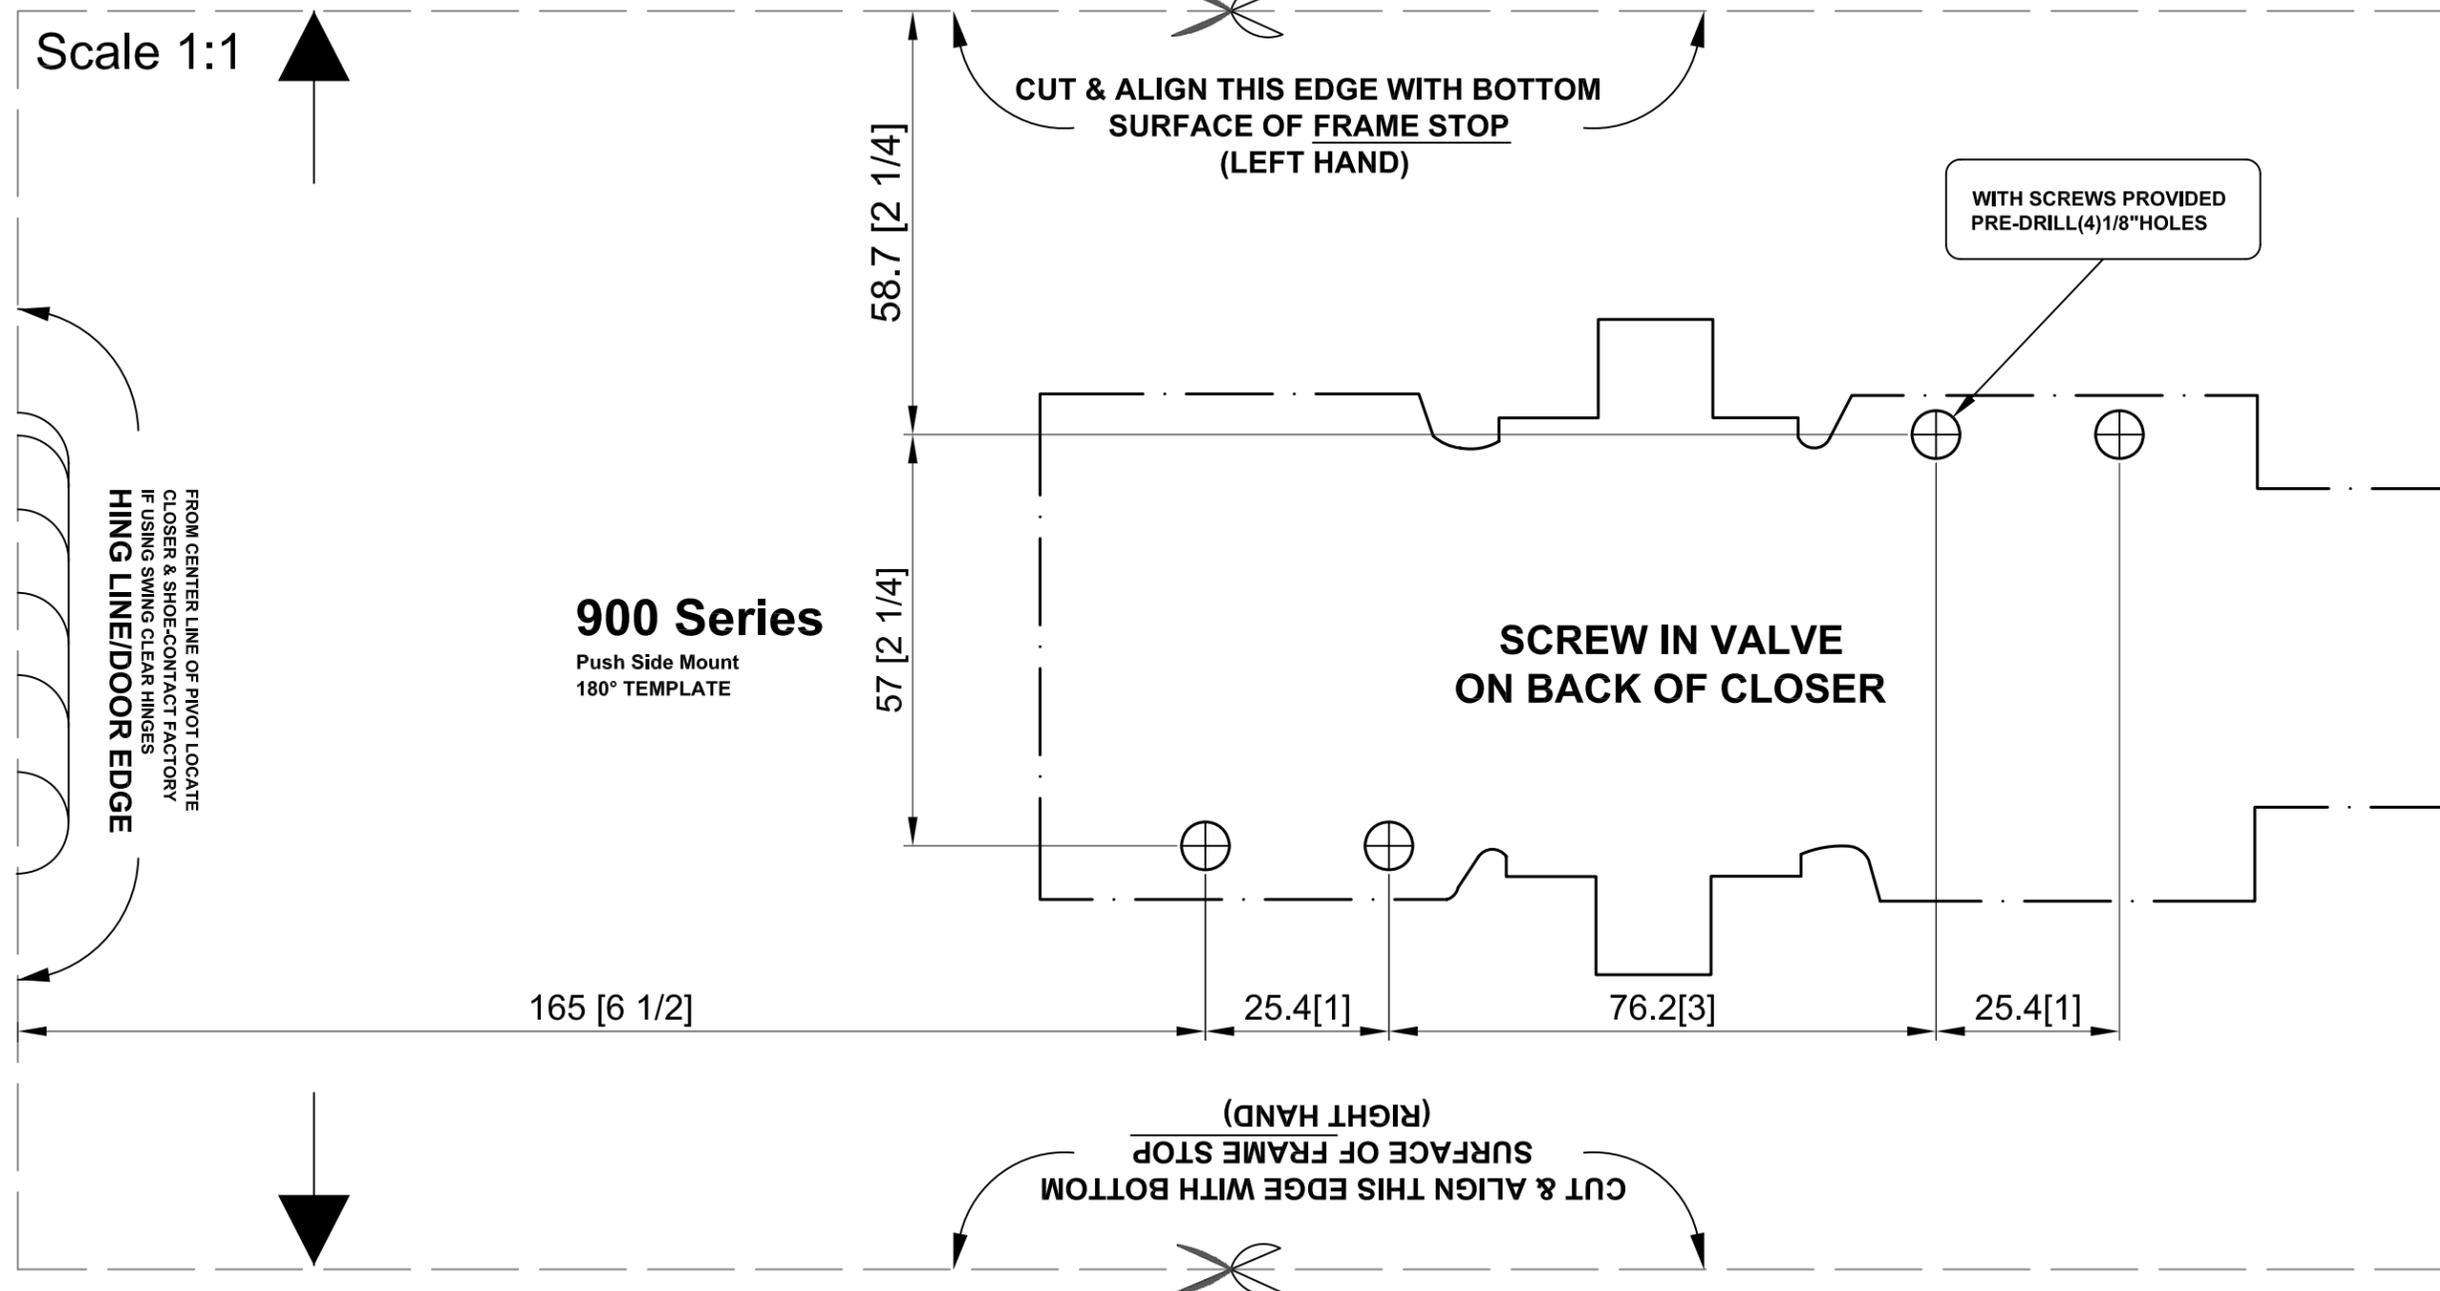

FROM CENTER LINE OF PIVOT LOCATE  
CLOSER & SHOE-CONTACT FACTORY  
IF USING SWING CLEAR HINGES  
**HING LINE/DOOR EDGE**

**900 Series**  
Push Side Mount  
180° TEMPLATE

CUT & ALIGN THIS EDGE WITH BOTTOM  
SURFACE OF FRAME STOP  
(LEFT HAND)

WITH SCREWS PROVIDED  
PRE-DRILL(4)1/8"HOLES

SCREW IN VALVE  
ON BACK OF CLOSER

CUT & ALIGN THIS EDGE WITH BOTTOM  
SURFACE OF FRAME STOP  
(RIGHT HAND)