


**TEMPLATE FOR
INSTALLING**

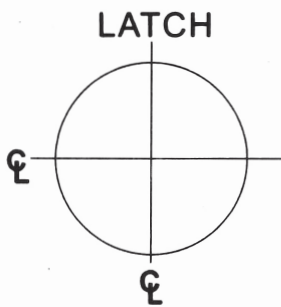

MARK
CENTER OF
DOOR THICKNESS
FOR 1" DIA HOLE

DETACH HERE

HIGH
BEVEL

LOW
BEVEL

MARK CENTER
FOR 3/8" HOLES

NOTE:
Do not drill these holes for
non thru bolt installation.

MARK CENTER
FOR 2 1/8" HOLE

Notch for metal
door only

2 3/4" BACKSET

2 3/8" BACKSET


2 3/4"

LATCH

5/32"

- IMPORTANT
1. FOR HIGHSIDE OF BEVEL PLACE
OUTSIDE LINE AT EDGE OF DOOR
 2. FOR FLAT DOORS PLACE CENTER
LINE AT EDGE OF DOOR
 3. FOR LOWSIDE OF BEVEL PLACE
INSIDE LINE AT EDGE OF DOOR

5/32"



HIGH
BEVEL

LOW
BEVEL

DH45